



- 1 Axle casing assembly
- 2 Differential side gear
- 3 Thrust washer - differential side gear
- 4 Differential pinion mate
- 5 Thrust washer - differential pinion mate
- 6 Crosspin
- 7 Differential case
- 8 Rollpin
- 9 Ring gear and pinion
- 10 Ring gear bolt
- 11 Bearing assembly - diff. unit
- 12 Shim - diff. bearing
- 13 Bolt - diff. strap
- 14 Differential strap
- 15 Bearing assembly - pinion head
- 16 Shim - pinion head
- 17 Slinger - pinion oil
- 18 Baffle - pinion oil
- 19 Spacer - collapsible
- 20 Bearing assembly - pinion tail
- 21 Thrustwasher - pinion tail bearing
- 22 Oil seal
- 23 Flange and dustshield assembly
- 24 Washer - pinion nut
- 25 Nut - pinion
- 26 Cover
- 27 Bolt - cover to housing
- 28 Plug - filler
- 29 Bracket - handbrake support
- 30 Shaft
- 31 Wheel stud
- 32 Bearing and seal assembly
- 33 Retaining ring
- 34 Breather



**London Taxi Parts USA**  
**Greensboro, North Carolina**

Order Parts Call: 336-254-2949 or  
[parts@londontaxipartsusa.com](mailto:parts@londontaxipartsusa.com)

Technical Questions Call: (336) 852-2541



Valid Credit Card Needed for ordering.

**LondonTaxiPartsUSA.com**